



 
1



2




3

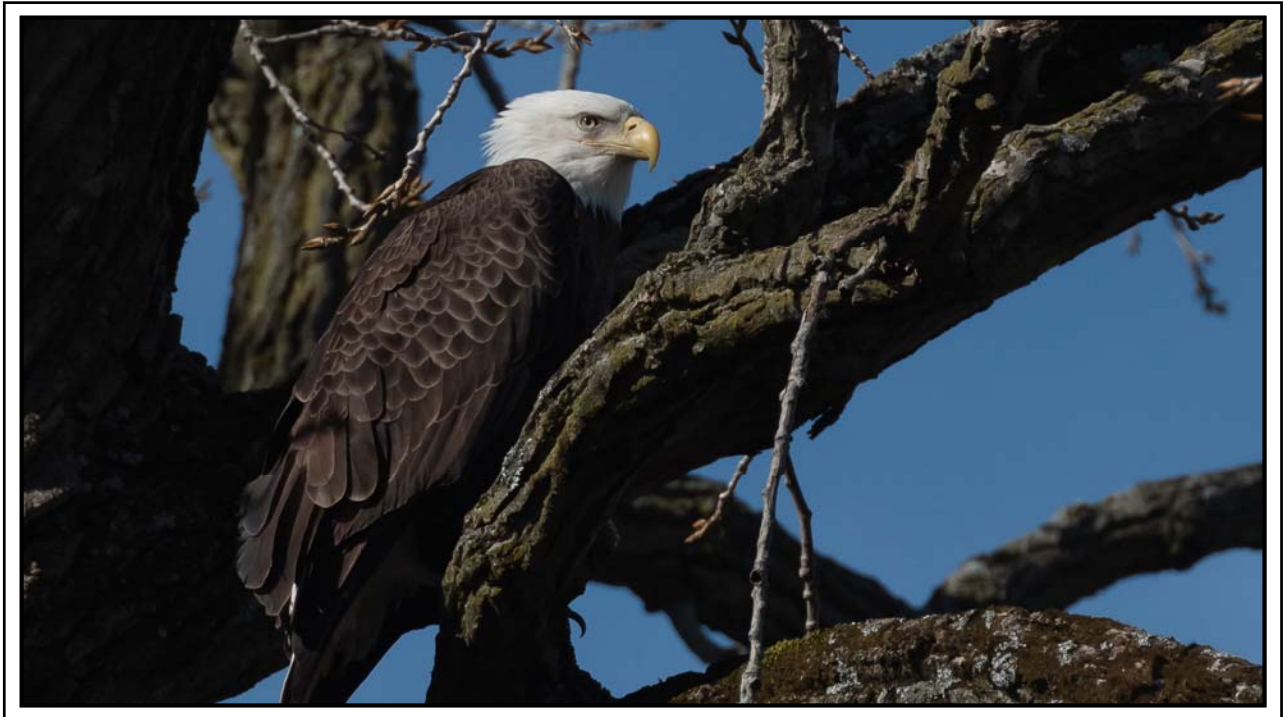

4



 5

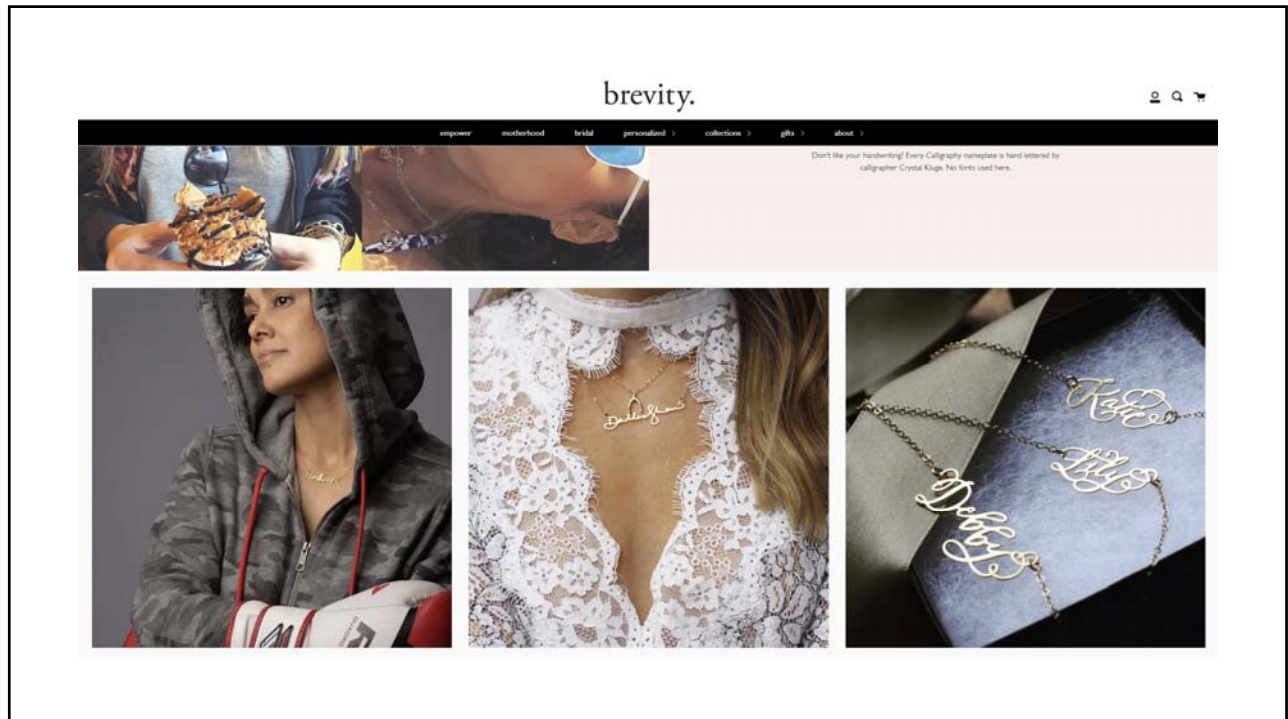

6



7



8



9



10

 


11

2 Check the current camera firmware version

The menus displayed on your camera may differ from those shown here.

- 1 Turn the camera on.
- 2 Press the **MENU** to display the menus.
- 3 Select **Firmware version** in the setup menu.

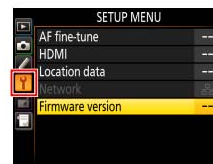

- 4 The current firmware version will be displayed. Confirm that the firmware version is the correct version for this update.



"#.##" is the firmware version.

- 5 Exit to the setup menu and turn the camera off.

12



13



14


15

Title	Language	Size	
User's Manual	English	20.10 MB	Download
The Setup Menu: External Recording Control	English	433.46 KB	Download

16


English
Select language

Download Center > D750




D750


> Other products



Manuals >



Firmware



Software >

Download firmware for Nikon digital products (firmware being the built-in software that controls cameras and other devices). To view descriptions, cautions, and download and installation instructions, click "View download page". Note that a card reader or other equipment may be required for some firmware updates. Instructions can be found on the download page.

Title	Version	Released	
D750 Firmware	C:Ver.1.15	2019/02/21	View download page
Distortion Control Data	Ver.2.017	2018/03/01	View download page

17

English
Select language

Download Center > D750 Firmware

D750 Firmware

Select your operating system.

Windows

Mac OS >

This software update program is for the customer-owned product listed above (the "affected product"), and is provided only on acceptance of the agreement listed below. By selecting "Accept" and clicking "Download", you are held to have accepted the terms and conditions of the agreement. Be sure you understand the terms of the agreement before beginning download.

- This service supplies software that can be used to update the D750 camera "C" firmware to version 1.15. Before proceeding, select **Firmware version** in the camera **SETUP MENU** and check the camera firmware version. You will not need to download or install this update if the firmware listed above is already installed.
- This update includes all changes made in previous updates.
- Read the information below before proceeding.

+ [Changes from "C" Firmware Version 1.13 to 1.15](#)

+ [Changes from Previous Versions](#)

+ [Viewing the Camera Firmware Version](#)

18

Updating the Camera Firmware

1. Create a folder on the computer hard disk and name it as desired.
2. Download **F-D750-V115W.exe** to the folder created in Step 1.
3. Run **F-D750-V115W.exe** to extract the following file to a folder named "D750Update":
 - D750_0115.bin (the camera firmware)
4. Using a card slot or card reader, copy "D750_0115.bin" to a memory card that has been formatted in the camera.

Note: Be sure to copy the firmware to the root (top-most) directory of the memory card. The camera will not recognize the new firmware if it is placed in a folder under the root directory.
5. Insert the memory card into the Slot 1 on the camera and turn the camera on.
6. Select **Firmware version** in the **SETUP MENU** and follow the on-screen instructions to complete the firmware update.
7. Once the update is complete, turn the camera off and remove the memory card.
8. Confirm that the firmware has been updated to the new version.

Note: For more detailed instructions or information on the equipment needed to complete the update, download the following pdf file:

[DSLR_Firmup_Win_En.pdf](#) (PDF) (0.21 MB)

Note: Updates can be performed for you by a Nikon-authorized service representative.

19

Nikon

Updating Digital SLR Camera Firmware

– Windows –

Thank you for choosing a Nikon product. This guide describes how to perform this firmware update. *If you are not confident that you can perform the update successfully, the update can be performed by a Nikon service representative.*

See the camera manual for information on camera operations.

Important

The camera may be damaged if power is interrupted or camera controls are operated during the update. Do not turn the camera off, remove or disconnect the power source, or operate camera controls during the update. If the update is not completed successfully and the camera becomes inoperable, take the camera to a Nikon-authorized service representative for inspection.

1

Get ready

To upgrade the camera firmware, you will need:

 
- The camera
- A computer equipped with a card reader or card slot
- One of the following camera power sources:
 - An AC adapter
 - A fully-charged rechargeable Li-ion battery of a type supported by the camera
- A Nikon-approved memory card that has been formatted in the camera (note that all data on the memory card will be deleted when the card is formatted; before formatting the card, back up any data you wish to keep to a computer or other device)
- The camera *User's Manual*

20

2 Check the current camera firmware version

The menus displayed on your camera may differ from those shown here.

- 1 Turn the camera on.
- 2 Press the **MENU** to display the menus.
- 3 Select **Firmware version** in the setup menu.

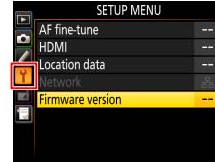

- 4 The current firmware version will be displayed. Confirm that the firmware version is the correct version for this update.



"#.#.#" is the firmware version.

- 5 Exit to the setup menu and turn the camera off.

 
21

3 Download and extract the new firmware

- 1 Create a new folder on your computer.
If you are using Windows 10 or Windows 8.1, select **Desktop** in the start screen to enter desktop mode.
- 2 After reading the end-user license agreement on the download site, select **Accept** and click **Download**. Save the file to the folder created in Step 3-1.
- 3 Open the folder created in Step 3-1 and double-click the downloaded file ("F-XXXX-V###W.exe," where "XXXX" is the camera name and "###" the firmware version) to extract the firmware to a sub-folder in the new folder.



The resulting file and folder hierarchy is shown below:

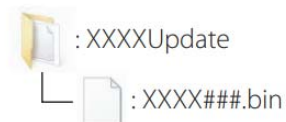

22

4 Copy the firmware to the memory card

The firmware can be copied to the camera memory card using a computer equipped with a card reader or card slot.

- 1 Insert a formatted memory card in the card reader or card slot. If an application such as Nikon Transfer 2 starts automatically, exit the application before proceeding.

Windows 10/Windows 8.1

If Windows displays the message shown in the illustration, click x to close the dialog.



Windows 7/Windows Vista

Under Windows 7/Windows Vista, an AutoPlay dialog may be displayed. Click .



23

- 2 Copy the "XXXX###.bin" file to the memory card.



When copying is complete, confirm that the memory card contains the file "XXXX###.bin".

Important

Be sure to copy the "XXXX###.bin" to the root directory of the memory card. The camera will not recognize the new firmware if it is placed in a folder under the root directory.

- 3 If your computer shows the memory card as a removable disk, right-click the removable disk and select **Eject** from the menu that appears. Remove the memory card from the card reader or card slot.

24

5 Update the camera firmware

The menus displayed on your camera may differ from those shown here.

During the update, do not:

- Remove the memory card
- Turn the camera off
- Operate any of the camera controls
- Attach or remove lenses
- Unplug or disconnect the AC adapter
- Remove the battery
- Subject the camera to powerful electromagnetic noise

Any of the above actions could cause the camera to become inoperable.

- 1 Insert the memory card containing the firmware into the camera memory card slot.

Cameras with Two Memory Card Slots

 
If the camera allows you to select one slot as the primary slot and the other as the secondary slot, insert the card into the slot currently selected as the primary slot. Otherwise insert the card into Slot 1.

- 2 Turn the camera on.


25

- 3 Press the **MENU** to display the menus.

- 4 Select **Firmware version** in the setup menu.

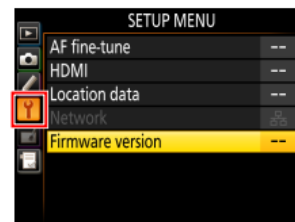


 - 5 The current firmware version will be displayed. Highlight **Update** and press the **OK**.

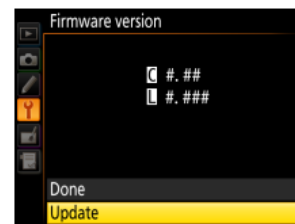


26

 - 6** A firmware update dialog will be displayed. Select **Yes**.

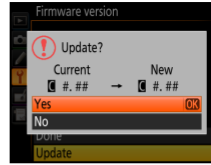

- 7** The update will begin. Follow the on-screen instruction during the update.

 - 8** Confirm that the update was completed successfully.
- 8-1. Turn the camera off and remove the memory card.
 - 8-2. Check the camera firmware version as described in Step 2, "Check the current camera firmware version".
 - 8-3. If the updated version is displayed, the update was successful.

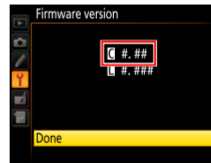

"#.##" is the firmware version.

If the update was not successful, contact a Nikon service representative.

- 9** **Format the memory card in the camera.**

This completes the firmware update.

27

Distortion Control Data

Loaded into compatible cameras, distortion control data reduce barrel and pincushion distortion when photographs are taken or edited.

Note: For more information on distortion control, see the camera manual.

Caution:
Remove the lens before performing this update.

+ Compatible Cameras

+ Checking the Version of the Distortion Control Lens Data Currently Installed


+ Product Description

+ Installation


+ Supported Lenses

End User License Agreement

28



English
Select language

Download Center > D750




D750


[> Other products](#)



Manuals >



Firmware



Software >

Download firmware for Nikon digital products (firmware being the built-in software that controls cameras and other devices). To view descriptions, cautions, and download and installation instructions, click "View download page". Note that a card reader or other equipment may be required for some firmware updates. Instructions can be found on the download page.

Title	Version	Released	
D750 Firmware	C:Ver.1.15	2019/02/21	View download page
Distortion Control Data	Ver.2.017	2018/03/01	View download page